


#### **RW software**

- for processing and displaying wheel, axle and total loads on a PC
- for 2/4-platform systems without axle summation

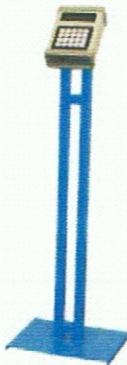

#### **Stand**

- for user-friendly installation and operation of a hand terminal



#### **Mobile power supply**

- battery pack 12V / 17.2 Ah
- connection to an HT3.x / 4.x via an additional cable